

**CAUTION**



Keep hands away from spinning head!


### MAKING FLOSS

Pick a cone; if it sticks in the stack of cones, twist it off the stack.

Hold an inch or two of the pointed end of the cone between two fingers and a thumb. With a light flicking action, roll cone in the web of floss building up in the pan. Lift the cone up with the ring of floss attached and rotate the cone to wrap the floss. **DO NOT** roll floss while the cone is inside the pan. This will pack the floss too tightly.

If the floss fails to stick to the cone, pass the cone near the spinner head to pick up a "starter" of melted sugar. Lift the cone out of the pan and wrap the floss with a "figure eight" movement of the hand. This leaves giant pockets and makes the final product appear larger.

Make sure room humidity is not too high, or product will be "heavy".

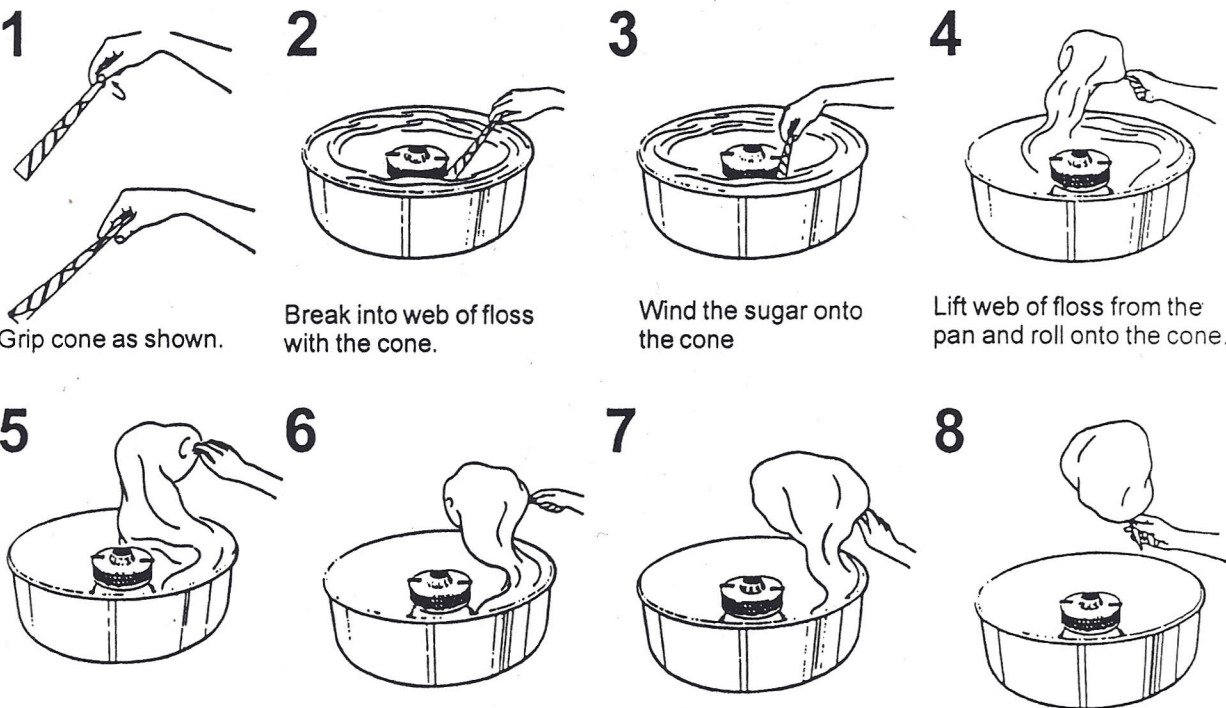

**1** Grip cone as shown.

**2** Break into web of floss with the cone.

**3** Wind the sugar onto the cone

**4** Lift web of floss from the pan and roll onto the cone.

**5**


**6**

**7**


**8**

# INSTALLATION OF WHIRL GRIP FLOSS STABILIZER


1

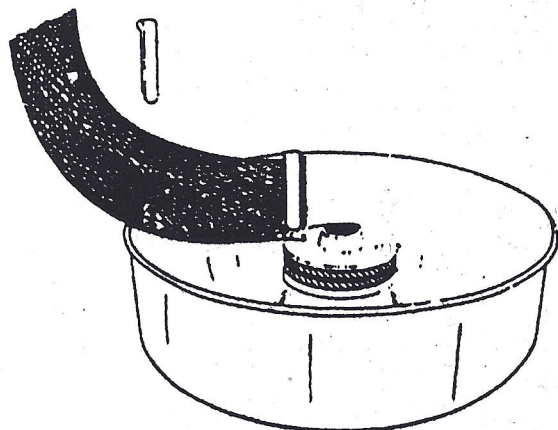

2

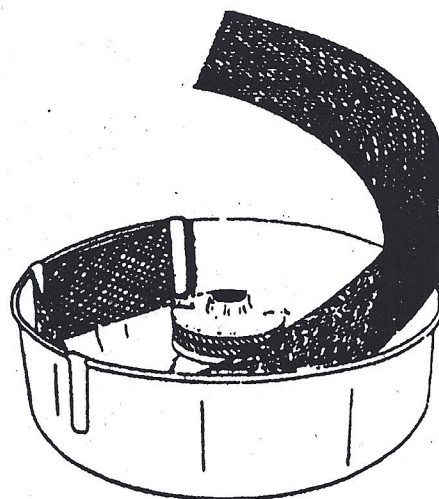


3

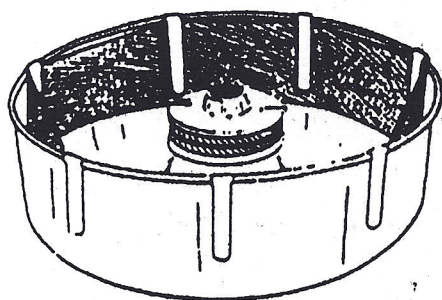


4

WHIRL GRIP  
FLOSS STABILIZER

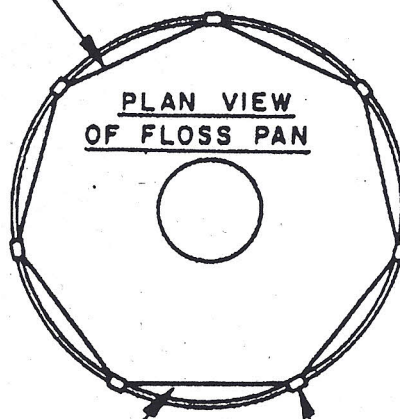

AIR SPACE IS REQUIRED  
BETWEEN PAN AND  
STABILIZER FOR PROPER  
OPERATION.

# PETROSH'S

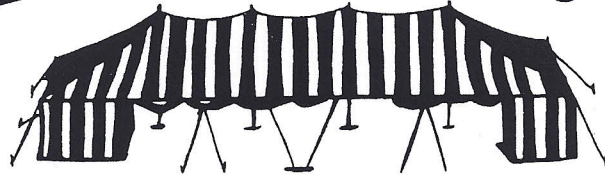

## BIG TOP

*All Occasion Party Rentals*

455 PHILADELPHIA AVENUE  
EGG HARBOR CITY, NJ 08215  
804-9805

### COTTON CANDY MACHINE DIRECTIONS

With main switch still OFF, fill floss head. Always fill it 90% full with sugar. This 90% level is necessary to obtain a balanced condition in the floss head. DO NOT OVERFILL! Excessive vibration will occur if overfilled. Before turning the power on, manually turn the head to balance out the sugar. This will eliminate excessive vibration of the head. Important: NEVER add sugar when motor is running.

Turn MAIN SWITCH and HEAT SWITCH "ON."

Turn heat control knob clockwise to maximum setting to initiate the fastest possible warm up.

The machine should start making floss in a few seconds. When the unit starts making floss, you must reduce the heat setting. Turn the heat control knob counter clockwise to eliminate smoking. If you operate the unit at "start Up" setting, you will carbonize" the ribbon.